



MANHASSET®

*Specialty Company
Yakima, WA*

STAND LAMP

Instructions

1. Connect power supply plug to a grounded 120v outlet.

Note: Use only a polarized extension cord and outlet.

2. Clip the lamp to the top of your MANHASSET® Music Stand using the spring clips on the lamp back.
3. Rotate the "On-Off" switch on the right end of the lamp to turn the lamp on.

Relamping Instructions

1. Remove the power plug from it's outlet.
2. Rotate the bulb counter clockwise to remove it from it's socket.
3. Replace it with a new bulb (use 40 watt or smaller, type T bulb) by screwing the bulb into the socket clockwise.
4. Plug the power plug into it's outlet.

General Maintenance

1. Do not use solvents such as gasoline, turpentine, etc. on the lamp housing. A damp cloth with mild detergent only should be used to wipe dirt and grease from the housing and cord.

WARNING!!

Potential Electric Shock Hazard

Do not handle an energized fixture or energize any fixture with wet hands or when standing on a wet or damp surface, or in water.

This equipment is only for use on 110-120v (single phase) power. To reduce the risk of electric shock, it should be plugged fully into an outlet.

This fixture is not intended to be used in potentially dangerous locations such as flammable or explosive environments.


Techni-Lux
www.techni-lux.com