

CX-804

8 Channel DMX Console

【 User manual 】



Lite-Puter Enterprise Co., Ltd.

website : www.liteputer.com.tw

E-mail: sales@liteputer.com.tw

Chapter 1. CX-804 Instruction

1-1 Feature


- Standard DMX 512 signal control
- 8 dimming control channel
- 8 control scene setting
- Chaser function:
 - 1.) Channel chase
 - 2.) Scene chase
 - 3.) Speeding control
 - 4.) Chase Function
- Flash
- Audio input

1-2 Specification

- | | |
|-------------------|--|
| ■ Power supply | DC 12V/ 1A |
| ■ Control signal | DMX512 / 1990 |
| ■ Control channel | 8 channel |
| ■ Connector | XLR 3-pin(x1), XLR 5-pin(x1),phone jack RJ11(x2) |
| ■ Audio input | Max. input : -10 db 100mV |
| ■ Weight | 1.5 Kg |
| ■ Dimension | 237(W)*53(H)*186(D)mm |




1-3 CX-804 Function

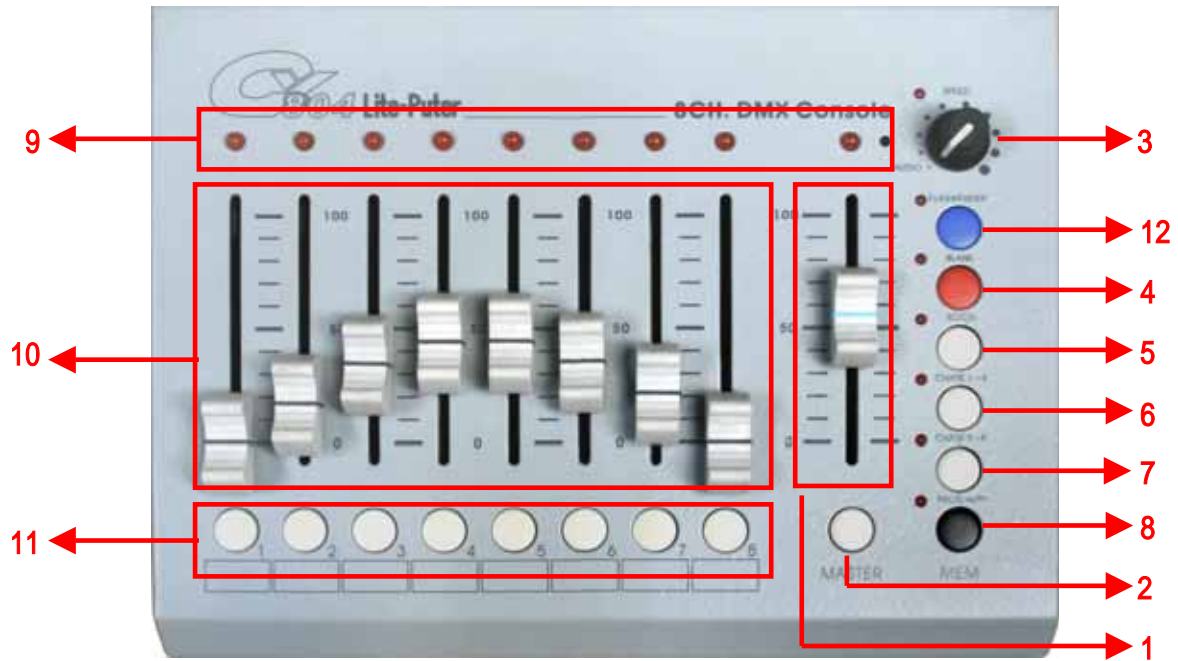

1	MASTER-VR	Master dimming control
2	MASTER	Master Flash control
3	SPEED/ AUDIO	Audio / speed chase control
4	BLANK	Pause
5	SC/CH	Scene / Channel control
6	CHASE 1	Chase 1-4
7	CHASE 2	Chase 5-8
8	PROG	Scene/ Chase direction control
9	LED	Signal display
10	VR-1...VR-8	<ul style="list-style-type: none"> ■ Setting 1...8 dimming channel ■ Recall 1...8 Scene
11	1 ~ 8	Channel / Scene setting / FLASH
12	FLASH/FADER	Chase Mode FLASH / FADER setting

1-4 CX-804 Rear panel

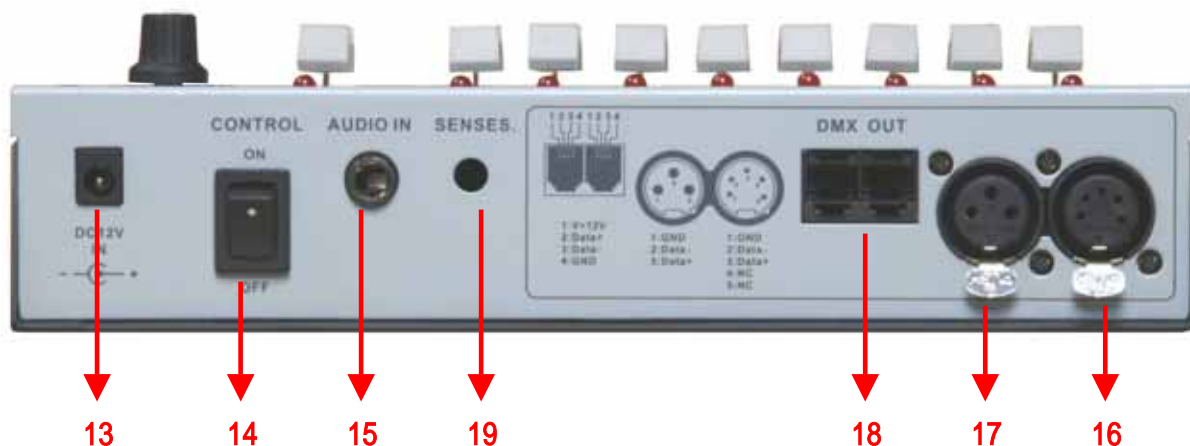

13	Power supply: DC 12V / 1A
14	Power switch
15	Audio input: 100mV
16	DMX connector: XLR 5-PIN
17	DMX connector: XLR 3-PIN
18	DMX connector: PHONE JACK (RJ11)
19	Audio sensitivity control

Chapter 2. CX-804 operation

2-1 SCENE setting

Select **【CH】** mode, and move the fader to set the dimming value
press **【PROG】** + **【1~8】** to save control scene.

STEP-1 press **【SC / CH】** to select the control channel
LED : off → in CH mode
LED : on → in SC mode

STEP-2 move **【MASTER-VR】** to the top

STEP-3 move **【VR-1 ... VR-8】** to dimming

STEP-4 press **【PROG】** + **【1...8】** to confirm and save the selection

- 1.) When MASTER-VR in 100%, and the VR-1...VR-8 in 50% of dimming value, the SCENE total output dimming value will be 50%.
- 2.) When MASTER-VR in 50 %, and the VR-1...VR-8 in 50% of dimming value, the SCENE total output dimming value will be 25%.

2-2 Scene recall

Refer to 2-1 to set up the dimming value of SC-1...SC-8, use the following function to recall the scene.

A: 0%...100% VR control

STEP-1 press **【SC / CH】** key to select **【SC】** mode. (LED "on")

STEP-2 press **【VR-1...VR-8】**

Ex : to recall SC-2, adjust the **【VR-2】** , to recall scene 2 by dimming

B: FLASH

STEP-1 press **【SC / CH】** to select **【SC】** mode. (LED "on")

STEP-2 press **【1...8】**

EX : to recall SCENE 2, press **【2】** ,and scene 2 switch to 100% full, and release the key to off the function.

2-3 CHASE

- (1) Internal chase setting (SPEED CHASE)
- (2) Audio input control (AUDIO)

2-3-1 Internal chase setting (SPEED CHASE)

2 mode of chase setting:

- (1) in **【CH】** mode : Chase by CH mode
- (2) in **【SC】** mode : Chase by SC mode

【CH】 mode

STEP-1 press **【SC/CH】** , to select the channel. (LED "off")

STEP-2 to select the chase.

Led : on off

1. press 【CHASE 1】 :

CH.	1	2	3	4	5	6	7	8
STEP 1								
STEP 2								
STEP 3								
STEP 4								

Repeat...

2. press 【CHASE 2】 :

CH.	1	2	3	4	5	6	7	8
STEP 1								
STEP 2								
STEP 3								
STEP 4								

Repeat...

STEP-3 to adjust the speeding of chase, press **【SPEED】** to adjust.

STEP-4 press **【PROG】** to change the chase direction.

STEP-5 press **【FLASH/FADER】** to change the chase mode.



【SC】 mode

STEP-1 press **【SC/CH】** , to select the SC mode

STEP-2 to select

- press **【CHASE 1】** : to execute the **SC-1...SC-4** chase.
- press **【CHASE 2】** : to execute the **SC-5...SC-8** chase.

STEP-3 move **【VR-1...VR-8】**

- Select **【CHASE 1】** :
move **【VR-1...VR-4】** , "SC-1...SC-4" to execute "Chase" mode
move **【VR-5...VR-8】** , "SC-5...SC-8" to execute "Dimming" mode
- Select **【CHASE 2】** :
move **【VR-1...VR-4】** , "SC-1...SC-4" to execute "Dimming" mode
move **【VR-5...VR-8】** , "SC-5...SC-8" to execute "Chase" mode

The dimming value control by MASTER-VR for above chase setting,
(please refer 2-1 / STEP-2)

STEP-4 Chase speeding, select the **【SPEED】** to control

STEP-5 Press **【PROG】** to change the chase direction

STEP-6 press **【FLASH/FADER】** to change the chase mode.

2-3-2 AUDIO CHASE

STEP-1 turn **【SPEED】** key to the bottom and feel " click " which appointed to audio.

2-4 BLANK

press **【BLANK】** for pause, and press once again back to the normal mode.