



User's manual for art. 3003

The Easy Control is a small DMX recorder that can solve many problems in small installations, when the price of a DMX controller is too high and therefore not acceptable.

The advantage in using the Easy Control is not only in the price, but also in the easiness of use: our DMX recorder is in facts very easy to operate and thus suitable for everybody.

What is the concept of Easy Control?

Having to install, for instance, 2 or 3 Giants, it is evident that the use of a DMX controller is too expensive. In such a case, it is possible to prepare up to a maximum of 7 different programmes by using any standard DMX controller. Once the programmes are ready, they can be downloaded in the Easy Control, which is now ready to run them.

Obviously, **it is not possible to change the programmes from the Easy Control**, while on the other hand it is possible to operate with the following functions:

- Choose 1 among the 7 different programmes
- Change the speed of the sequence of the programme
- Run the programme normally or automatically
- Stop the programme
- Storage up to a maximum of 7 different programmes up to a maximum of 127 cues for each programme
- It accepts up to a maximum of 512 DMX channels
- The programmes are stored in a 4 mb flash memory

Connection and use of the Easy Control

Connect one controller (Control Show, Control Spot, Mini Control, Fancy) to the fixtures with a DMX standard cable. Arrange the scenes as usual but do not use the fading as the number of steps needed immediately exceeds the capacity of the controller. Once you have prepared the scenes you can connect the controller to the Easy Control directly. You can start the controller in "auto mode" and start to record with the Easy Control.

RECORDING:

- 1) Connect your DMX-controller to Easy Control (record in- connector)
- 2) Choose the program 1...7 through PROGRAM key (for ex. Program n°1)
- 3) Keep the REC key pressed and then press the PLAY key: after 1 sec, the record led lights up and start the recording.
- 4) Change the cues on your DMX-controller (manually or automatically). The Easy Control record the cues and the times (for ex. First cue.. 10 sec... second cue.. 5 sec.... Third cue)
- 5) Press the STOP key to stop the recording
- 6) Disconnect your DMX-controller
- 7) Switch off he Easy Control

PLAY

- 1) Connect the Spots to Easy Control (Play-out connector)
- 2) Switch on the easy Control. Automatically you have the first cue, after 10 sec you have the second cue, after 5 sec. You have the third cue etc. (Program n°1)
- 3) Now, if you keep pressed the speed key you change the times. If you keep pressed the + key the times decrease (for ex. . First cue.. 5 sec... second cue.. 2.5 sec.... Third cue). The Easy Control record the new times.
Now if you switch off and then switch on the Easy Control you have: .
First cue.. 5 sec... second cue.. 2.5 sec.... Third cue

INITIALIZATION:

- 1) Switch off the controller
- 2) Press the **STOP** and **PROGRAM** buttons
- 3) Switch on the controller by keeping the buttons pressed



WARNING

Do not record with fading on because the number of steps needed immediately exceeds the capacity of the controller.