

LED LINE CONTROL

PROFESSIONAL CONTROL UNIT

GB

I

D

F

E

P

 **SGM**[®]
Technology for Lighting

 


Switching ON and OFF




- The first time Led Line Control is used, a COLOR or a MACRO must be set (see below Color adjustment or Macro activation).
- When the LEDs are on, keep the ON/OFF button pressed for three seconds to switch them off.
- Keep the ON/OFF button pressed for three seconds to switch them on again.

Color adjustment

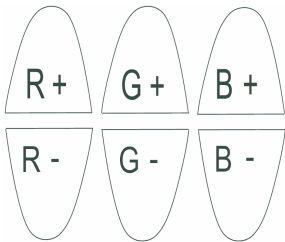


- The six buttons R+, R-, G+, G-, B+, B- can be used to adjust, in any situation, the intensity of the color, Red (RED), Green (GREEN), and Blue (BLUE) respectively.

 Orientation adjustment

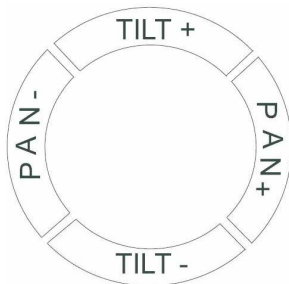


- The four buttons PAN +, PAN -, TILT + and TILT - can be used to orientate the fixture head (if PAN and TILT are available) along its horizontal and vertical axis respectively, in any permitted direction.

 Macro activation




- Press rapidly, in sequence, the STORE button to scroll the display and select one of the five functions: MACRO - PROGRAM - SCENE - MASTER - SCHEDULER.
- Select MACRO.
- Press a numeric key (1 to 9) to retrieve a MACRO stored in the fixture. **The MACROs are set by default and cannot be edited by the user.**
- When macro 0 is retrieved, the MACRO function is deactivated.

 Program activation

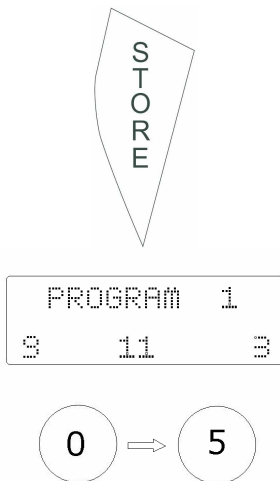

- Press rapidly, in sequence, the STORE button to scroll the display and select one of the five functions: MACRO - PROGRAM - SCENE - MASTER - SCHEDULER.
- Select PROGRAM
- Press a numeric key (1 to 5) to retrieve a PROGRAM stored in the fixture. **The programs can be edited by the user only as scenes; the other parameters cannot be edited.**
- When program 0 is retrieved, the PROGRAM function is deactivated.

 Scene activation

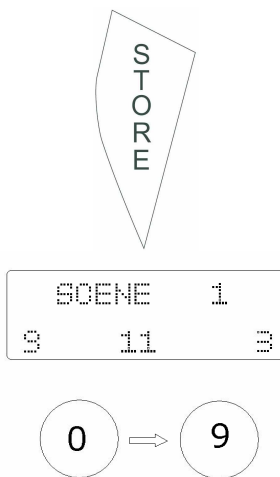

- Press rapidly, in sequence, the STORE button to scroll the display and select one of the five functions: MACRO - PROGRAM - SCENE - MASTER - SCHEDULER.
- Select SCENE.
- Press a numeric key (0 to 5) to retrieve a SCENE stored in the fixture; 0 corresponds to scene 10. The retrieved scene corresponds to the active program. **The SCENES can be programmed by the user.**
- To display the active program press rapidly, in sequence, the STORE button until PROGRAM is displayed with the number of the active program.

Storing a scene



- First, select the desired program and choose the scene to be edited. Then set the parameters R – G – B, PAN – TILT and MACRO to the required value. Finally keep the STORE button pressed for three seconds to store the scene of the program.

Difference between scenes and programs

 
Each program contains 10 scenes. When a program is activated, the scenes are automatically run in sequence according to the times set in the fixture. When a scene is activated, it is possible to retrieve the scene statically.

Master activation



- Press rapidly, in sequence, the STORE button to scroll the display and select one of the five functions: MACRO - PROGRAM - SCENE - MASTER - SCHEDULER.
- Select MASTER
- Press R+ or R- to set MASTER ON
- Press B+ or B- to set MASTER OFF

Scheduler activation



- Press rapidly, in sequence, the STORE button to scroll the display and select one of the five functions: MACRO - PROGRAM - SCENE - MASTER - SCHEDULER.
- Select SCHEDULER
- Press R+ or R- to set SCHEDULER ON
- Press B+ or B- to set SCHEDULER OFF



 **SGM**[®]
Technology for Lighting

SGM TECHNOLOGY FOR LIGHTING SPA
VIA PIO LA TORRE, 1 - 61010 TAVULLIA (PU), ITALY
TEL. +39 0721 476477 - FAX +39 0721 476170
www.sgm.it - info@sgm.it

USER'S MANUAL REL. 1.00